



Powered Retractable Tonneau Cover Owner's Manual


Thank you for purchasing Auto-Covers powered retractable tonneau cover system!

Operation

To run the tonneau system, open the rear tailgate. Press and hold the up button to open the tonneau cover.

Release the button at any time to stop the system. The panel will hold its position at anytime it is stopped. Continue pressing the up button until the panels are on top of the roof. If driving with the tonneau open, be sure the system is fully opened, with the tonneau bumpers in contact with the roof of the vehicle. To close the system, press the down button.

If the tonneau panels are covered with ice and snow, be sure to clear off panels before operating. Be sure there is enough clearance above the tonneau before running.

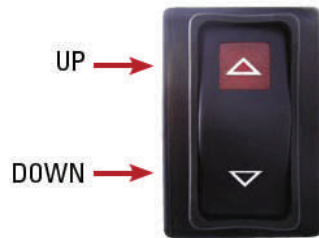

CAUTION

- Do not operate vehicle unless system is fully closed or open. (Bumpers touching roof)
- Do not be present under panels while system is not fully opened or closed.
- Do not allow people or animals to occupy bed with the cover closed.
- Do not operate tonneau cover or vehicle with objects or people on panels.
- In case of system malfunction, see instructions for manual over-ride.

Do not exceed 200 lb load on the panels. Loads should be distributed as much as possible to avoid damaging the panels.


Do not attach anything to the panels or mechanism without the approval of the manufacturers. This will void the warranty.

Disclaimer: Auto-Covers Inc. does not take responsibility for any incorrectly installed tonneau systems.

Manual Over-ride

In case of power loss or system malfunction, the system can be manually moved. Open the pump box on the left hand side. Using a 6mm hex wrench, open the pressure relief valve located on top of the pump to release the pressure in the system. The system can now be moved manually. After moving, tighten the pressure relief valve on the pump.

Manual relief valve on pump. Turn counter-clockwise 1.5 turns to release pressure.

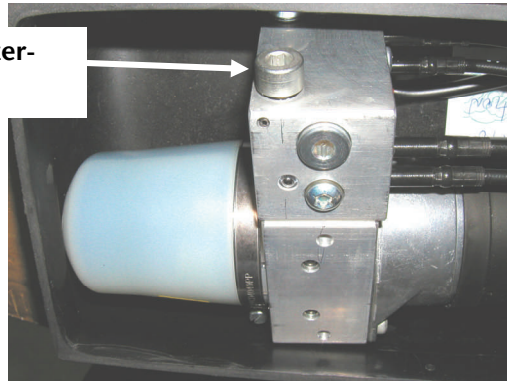

Troubleshooting

Tonneau system does not run

1. Check battery. The system will not run if the voltage is less than 10 volts. Start vehicle and retry.
2. Check fuse located near battery. Replace if blown.
3. Disconnect power and wait 5 minutes. Reconnect and re-try.
4. Call Auto-Covers Inc. for further instructions. Phone: 734-261-1918

Tonneau System runs slowly

1. Check battery condition.